
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1: Please follow chart to assembly table leg B and table top A,But don't tighten the long blot.

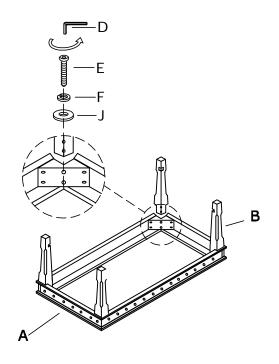

TOOLS REQUIRED(NOT PROVIDED): PHILLIPS SCREWDRIVER —


PARTS LIST:						
No.	Description	Sketch	Quantity			
A	ТОР		1 PC			
В	Leg	-	4PCS			
С	SHELF		1 PCS			

PARTS LIST:							
No.	Description	Sketch	Quantity				
A	ТОР		1 PC				
В	Leg	-	4PCS				

HAR	HARDWARE LIST:							
No.	Description	Sketch	, Size	Quantity				
D	Allen Key			1 PC				
Е	Long Blot	(a) (a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	1/4"*2.5"	28PCS				
F	Lock Washer	0		28 PCS				
J	Spring Washer	0		28 PCS				

NOTE: Straight Allen Key(k) is for use with a power drill.

Step 2: Please follow chart to assembly shelf C and table leg B. Tighten the screw.

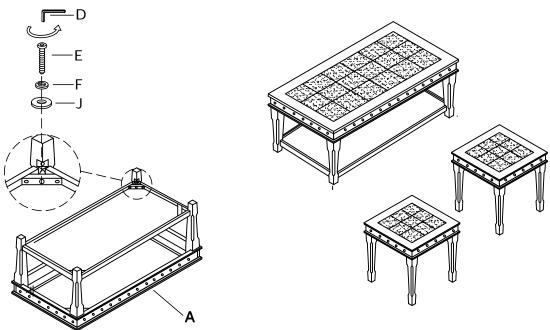

Step 3: Please tighten the long blot between table leg B and tabe top A.

Page 1 of 1 MADE IN CHINA