
ASSEMBLY INSTRUCTIONS



(BOX 1) BOX OF HEADBOARD

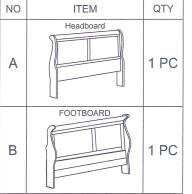


(BOX 2) BOX OF SIDE RAIL

NO	ITEM	QTY
С	Side rail	2 PCS
D	Slat	4 PCS
Е	Slat support	4 PCS

(BOX 2) HARDWARE LIST


TIATOVALLE LIOT				
NO	ITEM	QTY		
1	CSK SCREW M4 x 32mm	8 PCS		
2	CSK SCREW M4 x 16mm	16 PCS		
3	BRACKET	4 PCS		

STEP 1 : Attach Side Rail (C) to Head Board (A) Closely and push down to fit it. Repeat the same step to fitting the Foot Board (B).

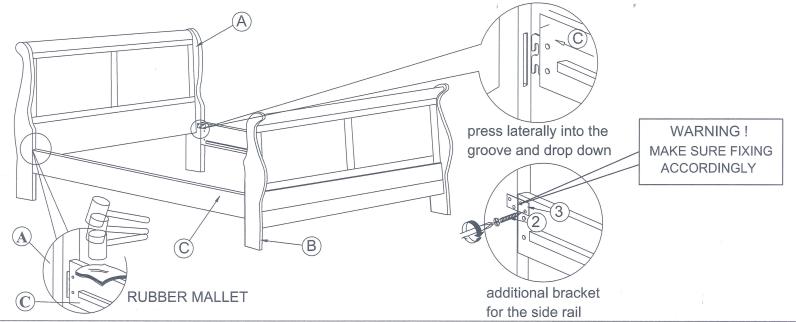

STEP 2 : Attach the Bed slat support (E) with adjuster to Side Rail (C) as picture shown. Loosen and tighten Adjuster for the stability of bed. Lastly, tighten the Bed slat (D) with CSK Screw (1).


(NOTE : THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

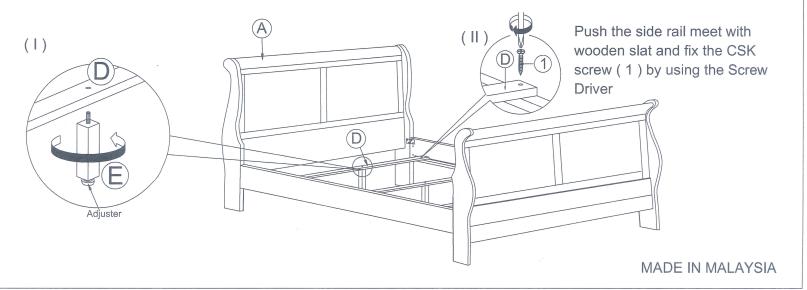

ASSEMBLY INSTRUCTIONS

MODEL: C4934A/C4935A/C4936A/C4937A KING BED (4+8)

(BOX 1) BOX OF HEADBOARD

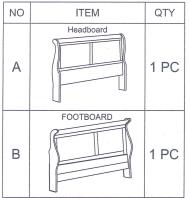


(BOX 2)
BOX OF SIDE RAIL

NO	ITEM	QTY
С	Side rail	2 PCS
D	Slat	4 PCS
Е	Slat support	8 PCS

(BOX 2) HARDWARE LIST

HARL	DWARE LIST	
NO	ITEM	QTY
1	CSK SCREW M4 x 32mm	8 PCS
2	CSK SCREW M4 x 16mm	16 PCS
3	BRACKET 0 0 0	4 PCS

STEP 1: Attach Side Rail (C) to Head Board (A) Closely and push down to fit it. Repeat the same step to fitting the Foot Board (B).

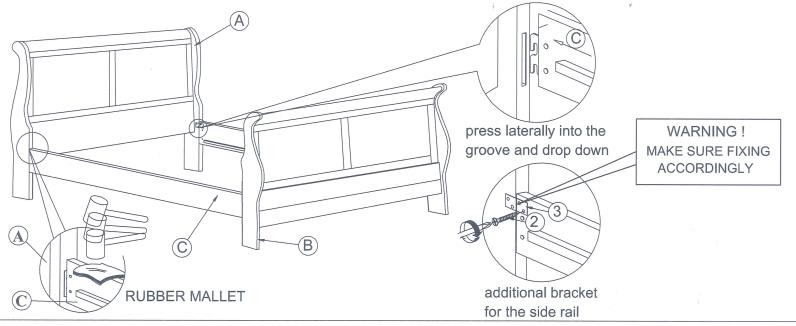

STEP 2 : Attach the Bed slat support (E) with adjuster to Side Rail (C) as picture shown. Loosen and tighten Adjuster for the stability of bed. Lastly, tighten the Bed slat (D) with CSK Screw (1).

(NOTE : THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

